


# DiMarzio® ClipLock®

## INSTALLATION INSTRUCTIONS

1. You will need a Phillips screwdriver with a good tip. Do not attempt installation with a worn-out screwdriver. Remove the strap bushings and screws from your guitar. They will not be used with your new DiMarzio® ClipLock® strap.

2. Select the enclosed screws that match the thickness of the original screws. Most Fender and other American-made guitars use the enclosed thin chrome screws with chrome ClipLock® bushings and white washers. Most Ibanez and some other guitars use the thicker black screws in the enclosed bag with the black ClipLock® bushings and black washers. Our screws are longer than your original screws.

3. Assemble the parts as shown: the screw goes through the big end of the ClipLock® bushing, the bushing goes through the hole in the strap end, then the washer slides onto the screw.

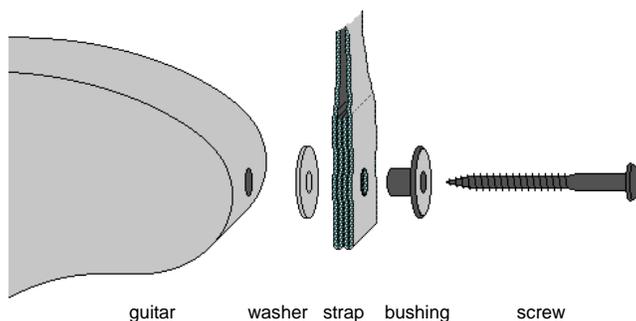

4. Screw the entire assembly tightly into the original strap bushing screw hole of your guitar. Repeat with the second assembly. NOTE: The screws must go all the way in, and should require only moderate force. If the screws seem too tight or won't go all the way in, remove the screws and rub the screw threads on a bar of soap before installation. Do not use excessive force. If your guitar body is exceptionally hard, you may need to drill a pilot hole as in step 6.

5. If your original strap button screw does not match the thickness of either size of enclosed screw, you should glue dowels into the existing strap button screw holes and drill new holes as in step 6.

6. If you are building a new guitar that does not have pre-drilled holes, use the black screws, bushings and washers and drill a pilot hole using a 3/32" drill (2.4mm) for a hardwood body or a 5/64" drill (2mm) for a softwood body.

### DiMarzio Inc.

1388 Richmond Terrace  
P.O. Box 100387  
Staten Island, NY 10310  
USA  
[www.dimarzio.com](http://www.dimarzio.com)